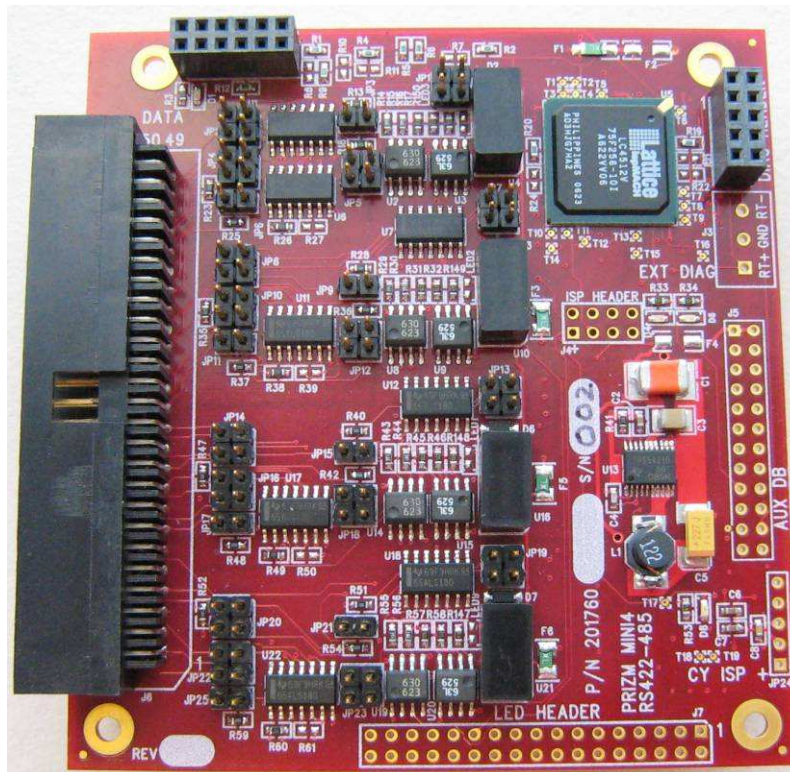


PRIZM™

8-Port RS-422/485 Daughterboard (P/N 201760-xxx)

User's Manual And Troubleshooting Guide



February 24, 2009
Rev. B

Moog Components Group
Springfield Operations
750 West Sproul Road
Springfield, PA 19064

E-Mail: mcg@moog.com URL: www.moog.com/components

Tel: 610-328-4000 Fax 610-605-6216

24/7 Technical Customer Support Hotline: 610-605-6101

TABLE OF CONTENTS

| | | |
|-------|--|---|
| 1 | RS-422/485 Daughterboard, Part Number 201760-xxx | 3 |
| 1.1 | RS-422/485 Daughterboard Revision History: | 3 |
| 1.2 | RS-422/485 Daughterboard Dash (-) Number Definitions | 3 |
| 1.3 | Manual Revision History: | 3 |
| 1.4 | RS-422/485 Daughterboard Operation: | 4 |
| 2 | Connectors | 4 |
| 3 | RS-422/485 Daughterboard Troubleshooting | 6 |
| 4 | RS-422/485 Daughterboard Board Level Testing | 7 |
| 4.1.1 | RS-422/485 Daughterboard Data Loop-Back Test | 7 |
| 4.1.2 | Test Data Channels | 7 |
| 5 | RS-422/485 Daughterboard – Auxiliary Daughterboard Options | 8 |
| 6 | Jumper Configuration Table | 9 |

1 RS-422/485 Daughterboard, Part Number 201760-xxx.

The Prizm RS-422/485 daughterboard provides eight (8) RS-422 or RS-485 pair-wise isolated data channels that are multiplexed onto a single Prizm high-speed serial data channel onto Mini4 or MiniMux2 Motherboard. Daughterboard channel selection of RS-422 or RS-485 can be simply done by selecting a few jumper posts and can be accomplished on a channel-by-channel basis for mixed data applications. Please refer to the table to for appropriate jumper configuration. With an additional pluggable auxiliary daughter board, more independent serial channels can be carried. The combinations of types of channels (RS-232, RS-422, and/or RS-485) will vary depending on the type and configuration of daughterboards. Up to two (2) RS-422/485 daughterboards can be used on a Mini4 system. MiniMux2 only supports one (1) daughterboard.

Each pair of RS-422/485 data channels are electrically isolated and independently powered. Each RS-422/485 channel can support up to 115.4 Kilobaud.

1.1 RS-422/485 Daughterboard Revision History:

The Submux3 motherboard has gone through the following printed circuit board (PCB) and Assembly revisions:

PCB Revision A/Assembly Revision A Original design

1.2 RS-422/485 Daughterboard Dash (-) Number Definitions

The daughterboard has a Dash Number appended to the part number. This Dash Number identifies the specific board configurations:

-001 Original configuration.

-002 With LED Display Header J7 placed

1.3 Manual Revision History:

The manual has gone through the following revisions:

Revision A

Preliminary

Revision B

Updated contact information to reflect Moog Components Group

1.4 RS-422/485 Daughterboard Operation:

On Mini4 and MinMux2 systems, the daughterboard is connected to the motherboard via the 12-pin motherboard connector. Individual serial channels are multiplexed on the daughterboard and interfaced to the motherboard as a single high-speed serial link.

2 Connectors

J6 – Data Connector

There is 50-pin dual-row rectangular Amp connector on the on the front of the daughterboard.

Mfg p/n – 2-103167-2

Mating Connectors

AMP p/n - 4-87631-1 (Prizm p/n CN0314) type- unstamped

AMP p/n – 4-87631-2 (Stamped)

AMP p/n – 4-87631-2 (Stamped with strain relief)

| Signal Name | Pin | Pin | Signal Name |
|-------------------|-----|-----|-------------------|
| R1+ | 1 | 2 | T1+ |
| GND_ISO_A | 3 | 4 | GND_ISO_A |
| R1- | 5 | 6 | T1- |
| R2+ | 7 | 8 | T2+ |
| GND_ISO_A | 9 | 10 | GND_ISO_A |
| R2- | 11 | 12 | T2- |
| Isolation barrier | | | Isolation barrier |
| R3+ | 13 | 14 | T5+ |
| GND_ISO_B | 15 | 16 | GND_ISO_B |
| R3- | 17 | 18 | T3- |
| R4+ | 19 | 20 | T4+ |
| GND_ISO_B | 21 | 22 | GND_ISO_B |
| R4- | 23 | 24 | T4- |
| Isolation barrier | | | Isolation barrier |
| R5+ | 25 | 26 | T5+ |
| GND_ISO_C | 27 | 28 | GND_ISO_C |
| R5- | 29 | 30 | T5- |
| R6+ | 31 | 32 | T6+ |
| GND_ISO_C | 33 | 34 | GND_ISO_C |
| R6- | 35 | 36 | T6- |
| Isolation barrier | | | Isolation barrier |
| R7+ | 37 | 38 | T7+ |
| GND_ISO_D | 39 | 40 | GND_ISO_D |
| R7- | 41 | 42 | T7- |
| R8+ | 43 | 44 | T8+ |
| GND_ISO_D | 45 | 46 | GND_ISO_D |
| R8- | 47 | 48 | T8- |
| N/C | 49 | 50 | N/C |

| J1 | | Motherboard Connector | | | |
|------------|----|------------------------------|---|----|------------|
| VDC Supply | 1 | o | o | 2 | VDC Supply |
| RXD_DB | 3 | o | o | 4 | TXD_DB |
| GND | 5 | o | o | 6 | GND |
| RXC_DB | 7 | o | o | 8 | TXC_DB |
| RCV_LINK | 9 | o | o | 10 | Future |
| RXC_DB2 | 11 | o | o | 12 | TXC_DB2 |

| J2 | | Diagnostics Header | | | |
|-----------|---|---------------------------|---|----|-----|
| RT+ | 1 | o | o | 2 | RT- |
| GND | 3 | o | o | 4 | GND |
| GND | 5 | o | o | 6 | GND |
| +5V | 7 | o | o | 8 | +5V |
| +5V | 9 | o | o | 10 | +5V |

J3 – Diagnostics Connector

| | |
|-------|-------|
| Pin 1 | – RT+ |
| Pin 2 | – GND |
| Pin 3 | – RT- |

J4 – ISP Header (Not Customer Accessible)

J5 – Auxiliary Daughterboard Connector

| Signal Name | Pin | Pin | Signal Name |
|-------------|-----|-----|---------------|
| +5V | 1 | 2 | +5V |
| RX9 | 3 | 4 | TX9 |
| RX10 | 5 | 6 | TX10 |
| RX11 | 7 | 8 | TX11 |
| RX12 | 9 | 10 | TX12 |
| RX13 | 11 | 12 | TX13 |
| RX14 | 13 | 14 | TX14 |
| GND | 15 | 16 | GND |
| SYNC_IN | 17 | 18 | FUTURE_AUX_DB |
| RT+ | 19 | 20 | RT- |
| RX15 | 21 | 22 | TX15 |
| RX16 | 23 | 24 | TX16 |

J7 – LED Header

| Signal Name | Pin | Pin | Signal Name |
|-------------|-----|-----|----------------|
| GND | 1 | 2 | +5V (optional) |
| R1 | 3 | 4 | T1 |
| R2 | 5 | 6 | T2 |
| R3 | 7 | 8 | T3 |
| R4 | 9 | 10 | T4 |
| R5 | 11 | 12 | T5 |
| R6 | 13 | 14 | T6 |
| R7 | 15 | 16 | T7 |
| R8 | 17 | 18 | T8 |
| | 19 | 20 | |
| | 21 | 22 | |
| | 23 | 24 | |
| | 25 | 26 | |
| | 27 | 28 | |
| | 29 | 30 | |
| | 31 | 32 | |
| | 33 | 34 | |
| | | | |

3 RS-422/485 Daughterboard Troubleshooting

In normal operation the following board mounted LED status should be observed:

| | |
|-------------|--|
| | |
| D1 | +5VDC power LED Lit green |
| D9 | RLINK LED - Lit green if receiving link from Modem |
| D10 | TLINK LED - Lit green if receiving link from Modem |
| D8 | +3.3VDC power LED Lit green |
| | |
| LED9 | Channels 1&2 Isolated +5VDC power - LED Lit green |
| LED1 | Channels 3&4 Isolated +5VDC power - LED Lit green |
| LED2 | Channels 5&6 Isolated +5VDC power - LED Lit green |
| LED3 | Channels 7&8 Isolated +5VDC power - LED Lit green |
| | |

RS-422/485 Data Activity LEDs

In normal operation with data traffic the following right angle bi-color LEDs, mounted on the edge of the board (under the data connector) should be observed:

| | |
|------------|--|
| D32 | Channel 1 lit RED for Tx, lit GREEN for Rx |
| D30 | Channel 2 lit RED for Tx, lit GREEN for Rx |
| D26 | Channel 3 lit RED for Tx, lit GREEN for Rx |
| D25 | Channel 4 lit RED for Tx, lit GREEN for Rx |
| D22 | Channel 5 lit RED for Tx, lit GREEN for Rx |
| D19 | Channel 6 lit RED for Tx, lit GREEN for Rx |
| D17 | Channel 7 lit RED for Tx, lit GREEN for Rx |
| D14 | Channel 8 lit RED for Tx, lit GREEN for Rx |

4 RS-422/485 Daughterboard Board Level Testing

- i. If DC power +5V LED (D1) is out:
 - Make sure +5VDC is available at the motherboard connector J1.
 - Check 2Amp fuse (F1) with ohmmeter, replace with another fuse if blown
- ii. If DC power 3.3 LED (D8) is out:
 - Problem with the 5V to 3.3V DC-DC converter circuit on the board. Not field serviceable. Replace the board.
- iii. Faulty isolated power supply for channel pairs:
 - LED9 – Out Ch1&2 will not work
 - LED1 – Out Ch3&4 will not work
 - LED2 – Out Ch5&6 will not work
 - LED3 – Out Ch7&8 will not work

4.1.1 RS-422/485 Daughterboard Data Loop-Back Test

With a daughterboard in both the vehicle (ROV) and surface units, run RS-422 data into pins 1 (+) and 5 (-) of the connector of channel 1 (as an example) being tested. The RS-422 data can be input into either the ROV or surface board. Connect the Rx to pins 2 and 6.. On the other end of the link, short pins 1 and 2 (the positive signals) and pins 5 and 6 (the negative signals) of the daughterboard channel 1 being tested. This process can be repeated on every channel of the board. This will allow the two daughterboards to talk to each other in loopback. Both RX and TX LEDs on both boards should be lit and/or flickering. If any of the LEDs are not operating, check one of the other channels. If the LEDs operate on that channel, replace daughterboard with a spare board or use the working channels only.

4.1.2 Test Data Channels

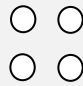
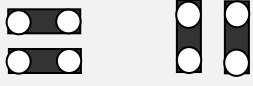

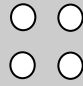



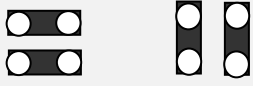
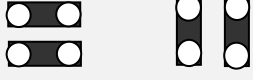
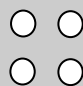
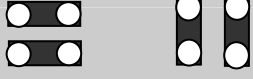

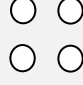
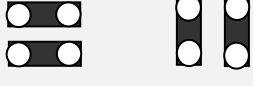


If an appropriate serial data test generator is available (or a PC with Communications software, or even a square wave generator) the individual channels can be tested on a

channel-by-channel basis. This test can be done for all channels on the daughterboard. The user must be sure that the test signal levels are compatible with the interface/channel being tested.

5 RS-422/485 Daughterboard – Auxiliary Daughterboard Options

The Prizm 8-channel RS-422/485 daughterboard supports 8 pair wise isolated RS-422/485 serial data channels, when plugged onto a Mini4 motherboard. Up to a total of 2 daughter boards may be stacked on one motherboard. The maximum data rate that this board supports is 115Kbaud. 201760 daughterboard can be intermixed with the 16-channel RS-232 daughterboard (**Prizm p/n - 210610**) or used with a Tritech Trigger/Responder (**Prizm p/n – 201600**) board as its auxiliary daughterboard. Custom boards auxiliary boards for this daughterboard would be designed in the future per customer requirements.

6 Jumper Configuration Table

| | RS-422 | RS-485 | RS-485 with 100 Ω termination |
|------------|------------------------------------|--|---|
| Ch1 | No Jumpers Placed ○ ○ ○ ○ | JP 22 & JP 23  | JP 25  |
| Ch2 | No Jumpers Placed ○ ○ ○ ○ | JP 20 & JP 19  | JP 21  |
| Ch3 | No Jumpers Placed ○ ○ ○ ○ | JP 16 & JP 18  | JP 17  |
| Ch4 | No Jumpers Placed ○ ○ ○ ○ | JP 14 & JP 13  | JP 15  |
| Ch5 | No Jumpers Placed ○ ○ ○ ○ | JP 10 & JP 12  | JP 11  |
| Ch6 | No Jumpers Placed ○ ○ ○ ○ | JP 8 & JP 7  | JP 9  |
| Ch7 | No Jumpers Placed ○ ○ ○ ○ | JP 4 & JP 5  | JP 6  |
| Ch8 | No Jumpers Placed ○ ○ ○ ○ | JP 2 & JP 1  | JP 3  |